





Installation guidelines for TT Waterstop and TT Swellmastic S2 to construction joints


1. Chase Cast in centre of wall section/joint section. Approximately 20mm x 15mm

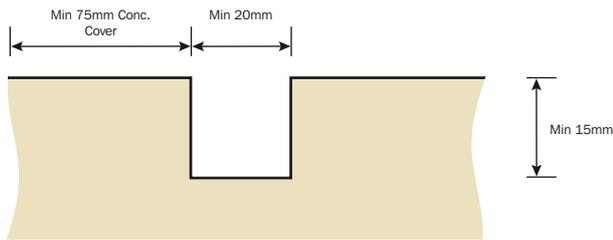


2. Min 10mm Bead TT Swellmastic S2 to base of chase

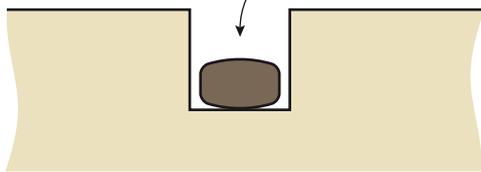

3. TT Waterstop adhered to chase of Swellmastic S2

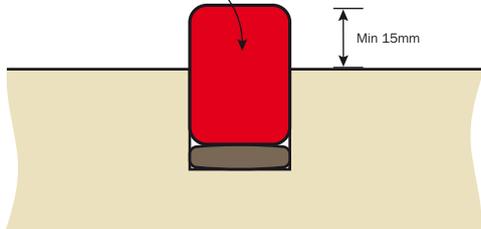

4. Joint option for TT Waterstop (within chase)

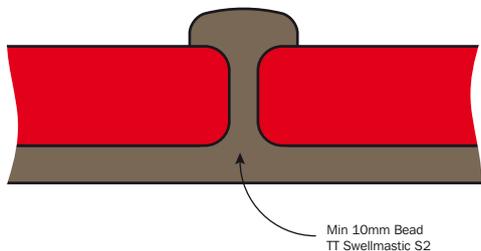

Typical vertical installation



Typical horizontal installation

For further information and assistance please refer to www.tritonsystems.co.uk or call Triton's technical team on 020 8310 3929.

Triton Contact Details:

Triton Systems Ltd.
Units 3 – 5 Crayford Commercial Centre, Greyhound Way, Crayford, Kent DA1 4HF

Tel: 01322 318 830

Fax: 01322 524 017

Email: info@tritonsystems.co.uk

www.tritonsystems.co.uk